



Product manual

RAZ

Airflow distribution

Version 1.0.1
Date: 06.05.2025.

RAZ

- Casing made of galvanized steel sheet
- Adjustable pressure differential range 50-150 Pa
- Casing air leakage EN 1751 (class C)
- Operating temperature 0-80 °C



- ▼ [Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Maintenance](#)



PRODUCT OVERVIEW

AIRFLOW DISTRIBUTION

 
 
DIMENSIONS

 
 
Width B [mm]	200	400	600	800	1000	1200
Height H [mm]						
400	6,99	10,08	14,21	16,27	19,36	23,49
600		13,18	17,30	22,46	25,55	28,64
800			21,43	26,58	30,71	32,77
1000				29,68	33,80	35,86
1200					34,83	36,89

* weight in kg

* B in increments 200 mm
H in increments 200 mm

NOTE: *B dimension can be maximum 200mm smaller then H dimension
(Bmin=H-200mm)

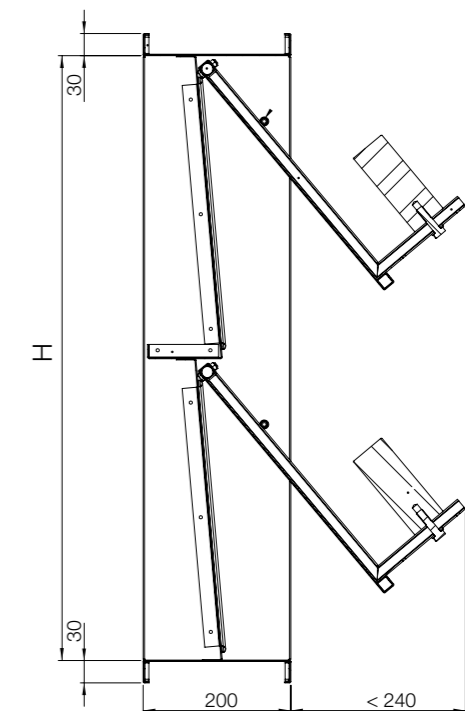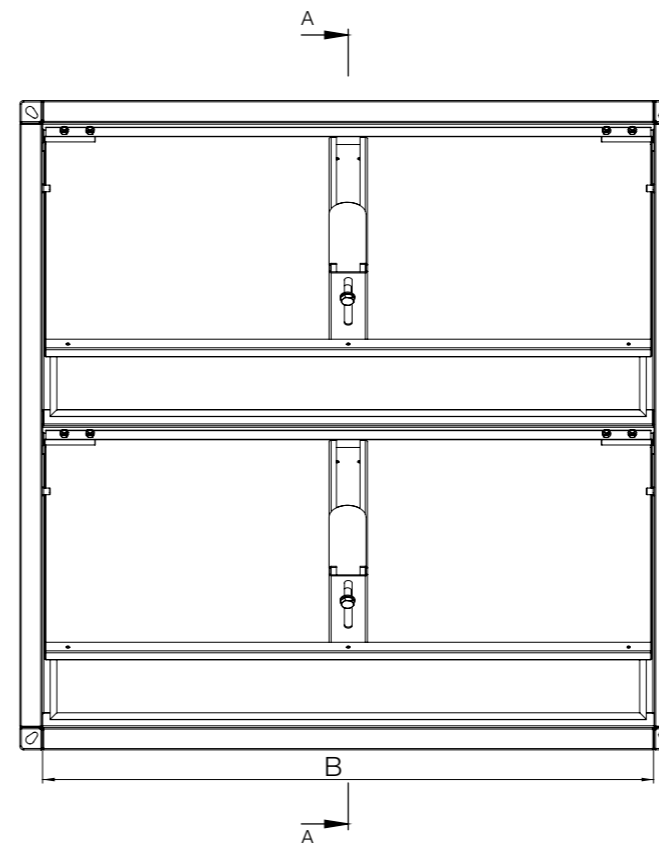

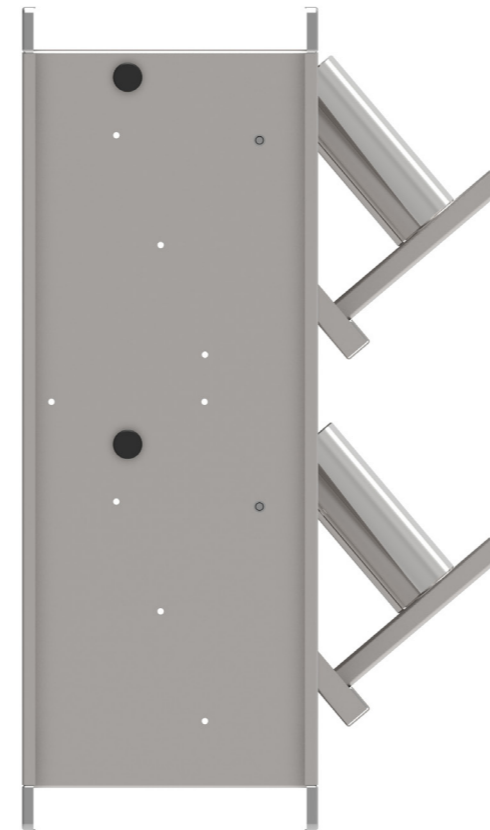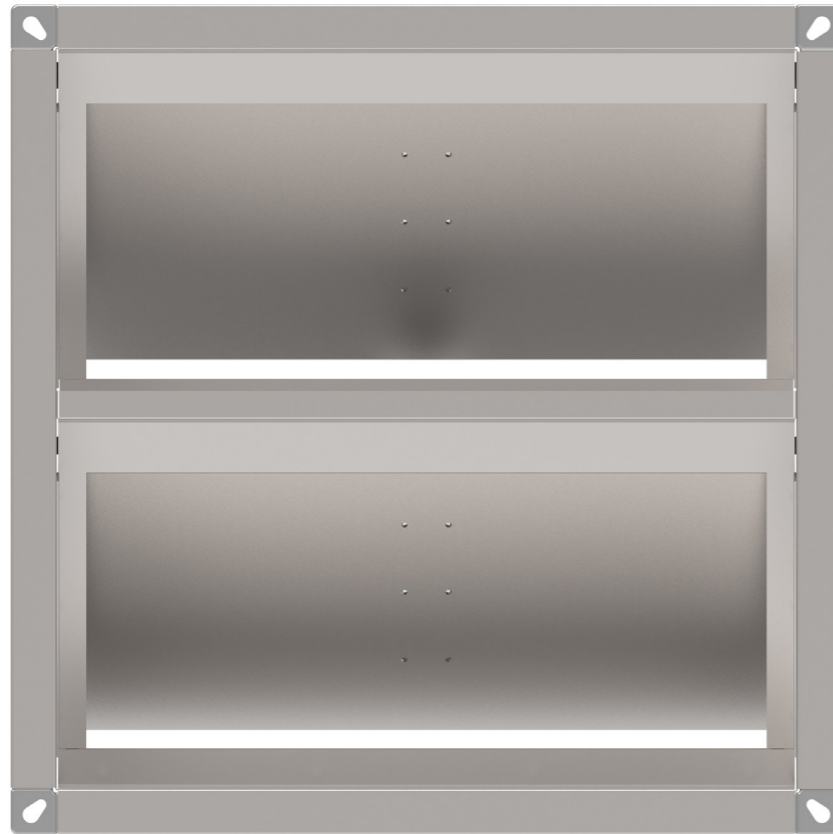

- ▼ [Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Maintenance](#)



ORDERING KEY

AIRFLOW DISTRIBUTION

ORDERING KEY

(1) Pressure relief damper (2) Dimensions (3) Color

RAZ - **400x400** - **RAL**

(1) Pressure relief damper:
RAZ

(2) Dimensions: **200-400 x 1200-1200** [mm]

(3) Color:
RAL



- ▼ [Product overview](#)
- ▼ [Ordering key](#)
- ▼ [Maintenance](#)



TRANSPORT

After arrival, check the damper for transport damage and shortcomings. In case of any damage or shortcomings, immediately contact your supplier.

STORAGE

If the damper is not installed immediately:

- Remove any wrapping.
- Protect damper from dust and contamination.
- Do not expose the product to the effects of weather, store in a dry place.

Please properly dispose of packaging material!

MAINTENANCE AND OPERATION

Klimaoprema dampers are designed as such do not require cleaning and regular maintenance.

- After each intervention, provide a systematic cleaning of dust
- Cleaning instruction: clean with a sponge, with water or a mild detergent

It is not permitted to alter the product in any way nor perform any changes to their structure without the manufacturer's consent. The functional test must be carried out in compliance with the basic maintenance principles of the European norm.

COMMISSIONING

- Carefully unpack - be careful of sharp edges and do not use excessive force for unpacking.
- Before commissioning - check the product functions.



AIRFLOW DISTRIBUTION

Images are for informational purposes only and may differ from the actual product.
Follow the latest versions of the catalog on the website.

-  Gradna 78A, 10430 Samobor, Croatia
-  +385 (0)1 33 62 513
-  info@klimaoprema.com
-  www.klimaoprema.com